


WiPickle User Manual

Operation

- 1. Arm the WiPickle:** Press and hold the HIGH switch. The Lights will start alternating slowly. When both lights are glowing steady, release the switch. The **WiPickle** is armed and ready to release targets
- 2. Release targets:** press and release any of the switches for the desired target(s). Note that light(s) corresponding with the switch will glow.
- 3. Disarm the WiPickle:** Any time you need to disable the system, **WiPickle** can be disarmed. Press and hold the HIGH switch. A High house Target will be released. Keep pressing the switch until the Lights will start alternating slowly. When both lights are off steadily, release the switch. The **WiPickle** is disarmed and will not release targets.

Warning: To prevent serious injury, you must disarm the WiPickle before handling trap machines or standing in front of the Low House window

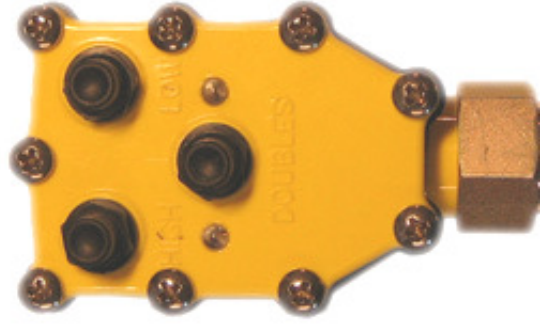

Changing the Release mode

Before attempting any Setup changes, you must disarm the **WiPickle** (see section 3)

4. Random Delay:

- 4.1. Simultaneously press and hold the **DOUBLES** and **LOW** switches.
- 4.2. Both light will flash quickly. When the **LOW** light glows steady, release the switches.
- 4.3. Arm the **WiPickle** (see section 1). All targets will be released after a random delay between 0 and 3 seconds. During the delay, the light(s) associated with the switch will glow.

5. Solo Delay:

- 5.1. Simultaneously press and hold the **DOUBLES** and **HIGH** switches.
- 5.2. Both light will flash quickly. When the **HIGH** light glows steady, release the switches.
- 5.3. Arm the **WiPickle** (see section 1). All targets will be released after a fixed delay of 3 seconds. During the delay, the light(s) associated with the switch will glow.

6. Immediate release:

- 6.1. Simultaneously press and hold the **LOW** and **HIGH** switches.
- 6.2. Both light will flash quickly. When both lights glows steady, release the switches.
- 6.3. Arm the **WiPickle** (see section 1). All targets will be released immediately.

Low Battery

If after pressing any of the switches, the light(s) corresponding with that switch blink 8 times, then its time to replace the battery.