

Wi-Pickle Manual / Stormy 9000

OPERATION

- 1. ARM THE WI-PICKLE:** Press and hold the HIGH switch. The LED lights will start alternating slowly. When both LED lights are glowing steady, release the switch. The Wi-Pickle is armed and ready to go.
- 2. RELEASE TARGETS:** Press and release any of the switches for desired target(s). Note that the LED light(s) correspond with the switch.
- 3. DISARM THE WI-PICKLE (Turn it off):** Press and hold the HIGH switch. A High house target will be released. Keep pressing the switch until the LED lights start alternating slowly. When both LED lights are off steadily, release the switch. The Wi-Pickle is disarmed and will not release targets.



CHANGING THE RELEASE MODE

- 4. RANDOM DELAY:**
 - 4.1 Simultaneously press and hold DOUBLES and LOW switches.
 - 4.2 Both LED lights will flash quick. When the LOW light glows steady, release the switches.
 - 4.3 Arm the Wi-Pickle (see section 1) All targets will be released after a random delay between 0 and 3 seconds. During the delay, the LED light associated with the switch will glow.
- 5. SOLO DELAY:**
 - 5.1 Simultaneously press and hold DOUBLES and HIGH switches.
 - 5.2 Both LED lights will flash quick. When the HIGH light glows steady, release the switches.
 - 5.3 Arm the Wi-Pickle (see section 1) All targets will be released after a fixed delay of 3 seconds. During the delay, the LED light associated with the switch will glow.
- 6. INSTANT RELEASE:**
 - 6.1 Simultaneously press and hold HIGH and LOW switches.
 - 6.2 Both LED lights will flash quick. When the BOTH light glows steady, release the switches
 - 6.3 5.3 Arm the Wi-Pickle (see section 1) All targets will release immediately.

WI PICKLE ADDRESS OVERVIEW:

Wi Pickle is a wireless SKEET remote. Each skeet field requires a Wi-Pickle and a receiver or receivers set on the same unique address. **First** an address is set to the Wi-Pickle and **Then** the receiver is paired with the Wi-Pickle.

WI PICKLE ADDRESS SET UP:

1. DISARM THE WI PICKLE (TURN IT OFF):

Press and hold the HIGH switch. A high house target may release. Keep pressing the switch until the LED lights start alternating slowly. When both lights are off steadily, release the switch. The Wi Pickle is disarmed and will not release.

2. ENTER ADDRESS SETUP MODE:

- 2.1 Simultaneously press and hold all 3 switches. This is best done by pressing the DOUBLES & LOW with your right thumb and the HIGH switch with your left thumb.
- 2.2 Both LED lights will flash quickly. When both lights are off steadily, release the switches.

3. UNDERSTANDING THE ADDRESS INDICATOR:

- 3.1 Wi-Pickle SKEET can be set to any address from range 1 to 15.
- 3.2 The High (Left) LED light indicates the “tenth” digit.
- 3.3 The Low (Right) LED light blinks the number of times corresponding to the “one” digit.

3.4 **Example:** Address set to # 3 HIGH LED will not light up (off), LOW LED will blink 3 times.

3.5 **Example:** Address set to #12, the HIGH LED will be solid (on), LOW LED will blink 2 times.

4. CHANGING THE ADDRESS:

- 4.1 Increase: For the next address, Press and quickly release the LOW switch.
- 4.2 Decrease: For the previous address, Press and quickly release the HIGH switch.
- 4.3 Verify address change: After each switch press, Observe the lights to verify the address number.
- 4.4 Now that you have selected & verified the desired address hold the DOUBLES button for 1 sec to save the address. When both lights blink rapidly, release the switch, the new address has been saved.

5. ARM THE WI-PICKLE:

Press and hold the HIGH switch. The LED lights will start alternating slowly. When both lights are glowing steady, release the switch. The Wi-Pickle is armed and ready to release.

LOW BATTERY: If after pressing any of the switches, the LED light(s) corresponding with the switch blinking 8 times, then it's time to replace the battery.

WARNING: To prevent serious injury, you must disarm the Wi-Pickle before handling the trap machine or standing in front of the low house window.